

PROGRAMMING THE PUXING PX-777+ FOR USE WITH THE DAKOTA ALERT PRODUCTS

To set the Puxing PX-777+ to the out of the box setting of the Dakota Alert products:

1. Turn the radio on. You should see CH-001 displayed. If so, turn the radio off and hold the ENTER key while powering up the radio. You should see 136.000 displayed. You are now in the frequency mode that will allow you to change the radios settings.
2. To change the frequency via the keypad press: 1 5 1 8 2 0 and the radio should beep three times quickly. You have now entered the frequency that the radio will operate on.
3. To change the CTCSS/PL tone, press MENU and the # key. You should see C-CDC? displayed. Press ENTER. You should see OFF displayed. Turn the selector knob on the top of the radio until 67.0 is displayed. Then press ENTER. The radio will beep two times quickly.
4. To change the radio to narrow band, press MENU and turn the selector knob on the top of the radio until you see N/W? displayed. Press ENTER and you should see NARROW displayed. Press ENTER to set the radio to narrow. Press VFO/MR twice to jump out of the menu mode.
5. OPTIONAL: To lock the keypad from accidental changes, press and hold the * key until the radio beeps. To unlock the keypad again, press and hold the * key until the radio beeps.

The above settings correspond to the Dakota Alert settings of Channel 1 and CTCSS 01. If you have any communications issues between your equipment confirm that these settings are also correct on the Dakota Alert equipment.